

Terms and roles

- ‘Contractor’ means the person bound to execute the work under the Contract.
- ‘Contractor’s Representative’ is the Project Manager as stated in Item 1B of the Supplementary Conditions of Contract Annexure.
- “Engineer” or ‘Supervising Engineer’ is the Superintendent and the Superintendent’s Representative/s.
- ‘Inspector’ means a person appointed in writing by the Superintendent under Clause 22 of the General Conditions of Contract;
- ‘Principal’ means the Principal stated in Item 3 of the General Conditions of Contract Annexure;
- ‘Superintendent’ means the person stated in Item 5 of the General Conditions of Contract Annexure or another person appointed from time to time in writing to be the Superintendent and notified as such in writing to the Contractor by the Principal.
- ‘Supervising Officers’ are the Superintendent and their surveillance staff including the Superintendent Representative/s, Inspector/s and others.
- ‘Superintendents’ Representative’ means a person appointed in writing by the Superintendent under Clause 24 of the General Conditions of Contract.